

CAUTION: Ammunition reloading can be dangerous if done improperly and should not be attempted by persons not willing and able to read and follow instructions exactly. Children should not be permitted to reload ammunition without strict parental supervision. Always wear safety glasses when reloading and shooting.

Ammunition loaded with these tools and data should only be used in modern guns in good condition. We do not accept responsibility for ammunition loaded with these tools or data as we have no control over the manufacture and storage of components or the loading procedure and techniques. Primers and gun powders, like gasoline and matches, can be dangerous if improperly handled or misused.

It is your responsibility to insure the safety of your loads.

Listed below are some facts that will help keep you out of trouble. Some are obvious, but they are worth repeating.

1. Empty the hopper when not in use. Always return the unused powder to the original container for storage. With the Lee Turret Press, simply remove the entire turret and pour the powder from the hopper.
2. To prevent double charges, be sure to cycle the press only once. If in doubt, empty the case and do it again. A double charge is almost always a sufficient overload to blow up the gun and possibly injure the shooter.
3. Do not use for black powder. Black powder is an explosive.
4. Do not smoke or handle powder near an open flame.
5. Check to be sure the correct cavity is in place.
6. Check to be sure the correct powder is being used for the bullet weight and cartridge selected.
7. Check to be sure all the powder has cleared the drop tube.

The following are factors that will increase pressures. Some will be dangerous.

1. Do not use more powder than recommended.
2. Do not use a heavier bullet than recommended.
3. Do not seat the bullet deeper than normal.
4. Do not use magnum primers unless using a slow burning ball powder.
5. Greatly oversize bullets, excessively hard bullets or cases that are too long will cause higher pressures.
6. High temperatures or cartridges that were stored in a hot car or car trunk, will produce higher pressures.

PARTS LIST

Body with drop tube	\$15.00
Deluxe Body with drop tube	20.00
Hopper with cover	2.00
Deluxe Hopper	5.00
Actuator	5.00
Lever	2.00
Spring	.50
Lever Bushing and Screw	1.00
Charge Disk (Set of 4)	15.00
Charge Disk, each	5.00
Expander Die, complete	10.00


Specify caliber

LIMITED WARRANTY

Lee reloading products are guaranteed not to wear out or break from normal use for two full years or they will be repaired or replaced at no charge if returned to the factory. Any Lee product of current manufacture, regardless of age or condition will be reconditioned to new, including a new guarantee, if returned to the factory with payment equal to half the current retail price.




DELUXE AUTO-DISK POWDER MEASURE AND AUTO-DISK POWDER MEASURE COMPLETE INSTRUCTIONS

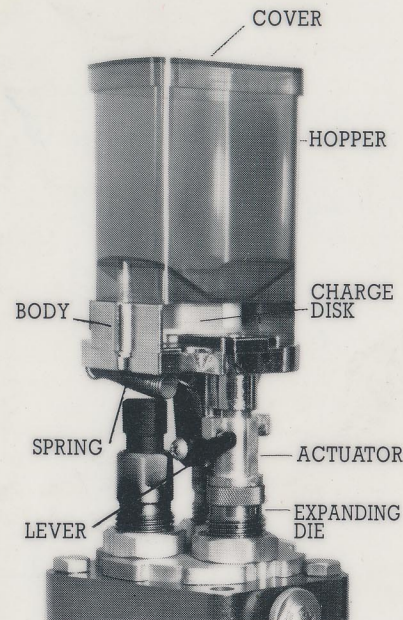


The new Auto-Disk Powder Measure automatically dispenses an exact charge that is more uniform than any other powder measure. The case itself actuates the measure while the neck is being flared. The powder measure is actuated during the presses' greatest mechanical advantage. This insures a smooth even action of the measure. A built in powder baffle and charge disks precisely molded from glass reinforced engineering grade plastic, all contribute to the previously unattainable uniformity of charges.

ASSEMBLY Remove the 3/4" hex powder funnel adapter from the powder through die expander, and screw the Auto-Disk powder measure in its place. Be sure to replace the "O" ring on the threaded actuator. Screw the assembly into the reloading press until it just touches the shell holder. If this produces excessive flare, back out the assembly until it is to your liking. When adjusted to best flare and the measure is not in a suitable position, it can be detached from the actuator and turned 180 degrees. To do this, remove the screw, spring, and lever. Reassemble when correctly positioned.

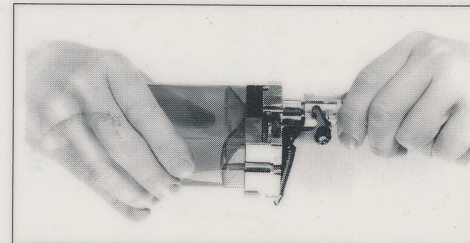

To remove disk; empty hopper. Firmly pull on hopper and expanding die until disk releases and drops out the rear.

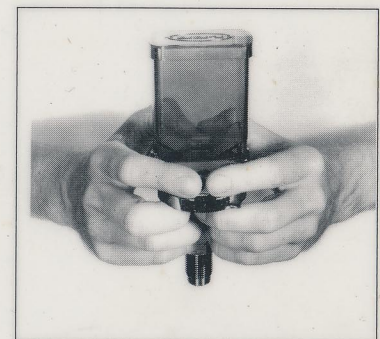

Insert the disk in rear of powder measure until lever snaps into place. This requires a firm push with both index fingers.

CAUTION:

1. BE CERTAIN YOU HAVE THE CORRECT HOLE FOR THE POWDER, BULLET AND CARTRIDGE SELECTED. THE WRONG ONE MAY GIVE A DANGEROUS CHARGE THAT COULD BLOW UP THE GUN AND SERIOUSLY INJURE THE SHOOTER.
2. EXERCISE EXTREME CAUTION TO INSURE YOU DO NOT CYCLE THE BAR MORE THAN ONCE. IF IN DOUBT, REMOVE THE CASE AND EMPTY IT.
3. FREQUENTLY LOOK THROUGH DROP TUBE TO CONFIRM ALL THE POWDER HAS CLEARED. BULLET LUBRICANT CAN ADHERE TO THE EXPANDING PLUG AND CAUSE PARTIAL OBSTRUCTION. THIS WILL CAUSE ERRATIC AND POSSIBLY DANGEROUS LOADS. BE SURE TO KEEP YOUR EXPANDING PLUG CLEAN!



